

#### ELKO EP, s.r.o.

Palackého 493 769 01 Holešov, Všetuly Czech Republic Tel.: +420 573 514 211 e-mail: elko@elkoep.com www.elkoep.com

Made in Czech Republic 02-4/2017 Rev.: 0



# PRI-41 PRI-42


Current monitoring relay of Imin and Imax in 1P - AC/DC




## Characteristics

- Used to monitor overload/relief (machines, motors, etc.), check consumption, diagnostic on a remote device (burning, short circuit, increased current draw, etc.)
- Relay is used for monitoring AC or DC current in three ranges.
- Monitors level of current in two independent levels (Imax, Imin).
- setting the monitored upper level (Imax) in % of range.
- setting the monitored lower level (Imin):
   in % of the set upper limit (PRI-41, function HYSTERESIS)
   in % of range (PRI-42, function WINDOW)
- Selectable function of output contacts (independently/in parallel).
- Independent adjustable time delay of both levels
- (eliminating short-term drops and spikes).
- Galvanically separated power supply from monitoring inputs.
- Output contact for each monitored current level.


## **Symbol**

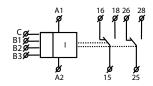

#### Connection

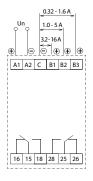

### Description

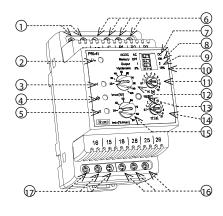

- 1. Supply voltage terminals (A1-A2)
- 2. Supply voltage indication
- 3. Level indication Umax
- 4. Output indication
- 5. Level indication Umin
- 6. Current monitoring terminals (C-B1-B2-B3)
- 7. Type of monitored current
- 8. Memory function
- 9. Output function setting
- 10. Hysteresis setting
- 11. Time delay setting (Umax)
- 12. Upper level setting (Umax)
- 13. Memory reset
- 14. Time delay setting (Umin)
- 15. Lower level setting (Umin)
- 16. Output contact 2 (28-25-26)
- 17. Output contact 1 (16-15-18)

Type of load	 cos φ ≥ 0.95 AC1	—M— AC2	—M— AC3	AC5a uncompensated	AC5a compensated	HAL 230V HAC5b	AC6a	 AC7b	———— AC12
Contact material AgNi, 16A	250V / 16A	250V / 5A	250V / 3A	230V / 3A (690VA)	х	800W	х	250V / 3A	250V / 10A
Type of load	AC13	_ <del></del>		DC1	—M— DC3	M DC5	DC12	_ <del></del>	_ <del></del>
Contact material AgNi, 16A	250V / 6A	250V / 6A	250V / 6A	24V / 16A	24V / 6A	24V / 4A	24V / 16A	24V / 2A	24V / 2A

hnical parameters							
		PRI-41		PRI-42			
Supply circuit							
Supply terminals:			A1-A2				
Supply voltage: Consumption (max.):		AC/DC 24 – 240 V (AC 50-60 Hz)					
		3 VA/1 W					
Supply voltage:	upply voltage:		AC 400 V (50-60 Hz)				
Consumption (max.):	40	5 VA/2.5 W					
Supply voltage tolerance:		-15 %; +10 %					
Measuring circuit							
Monitored terminals:		C-B1	C-B2	C-B3			
Monitored ranges*:		AC/DC 3.2 – 16 A	AC/DC 1 – 5 A	AC/DC 0.32 – 1.6 A			
		(AC 50-60 Hz)	(AC 50-60 Hz)	(AC 50-60 Hz)			
Input resistance:		2.3 mΩ	11 mΩ	23 mΩ			
Max. permanent current:		16 A	8 A	3 A			
Inrush overload (1 s):		20 A	16 A	6 A			
Time delay Imax (t1):		adjustable, 0.1 – 10 s					
Time delay Imin (t2):		adjustable, 0.1 – 10 s					
Accuracy							
Setting accuracy (mech.):		5 %					
Repeat accuracy:		< 1 %					
Temperature dependance:		< 0.1 %/°C (°F)					
Limit values tolerance:		5 %					
Hysteresis (fault to OK):		selectable, 5 %/10 % from the upper range value					
Output							
Contact type:		2× changeover/SPDT (AgNi)					
Current rating:		16 A/AC1					
Breaking capacity:		4000 VA/AC1, 384 W/DC1					
Inrush current:		30 A/< 3 s					
Switching voltage:		250 V AC/24 V DC					
Power dissipation (max.):		2.4 W					
Mechanical life:		10.000.000 ops.					
Electrical life (AC1):		100.000 ops.					
Other information							
Operating temperature:		−20 55 °C (−4 131 °F)					
Storage temperature:		−30 70 °C (−22 158 °F)					

operating temperature.	2033 C( 4131 1)		
Storage temperature:	−30 70 °C (−22 158 °F)		
Dielectric strength:			
supply – output	AC 4 kV		
output 1 – output 2	AC 4 kV		
Operating position:	any		
Mounting:	DIN rail EN 60715		
Protection degree:	IP40 front panel / IP20 terminals		
Overvoltage category:	III.		
Pollution degree:	2		

max. 1× 2.5, 2× 1.5/

max. 1× 2.5 (AWG 14)

 $90 \times 52 \times 65 \text{ mm} (3.5" \times 2" \times 2.6")$ 

UNI - 166 g (5.86 oz), 400V - 248 g (8.7 oz)

EN 60255-1, EN 60255-26, EN 60255-27

Cross-wire section - solid/


Dimensions:

Weight:

Standards:

stranded with ferrule (mm²):

#### **Function**

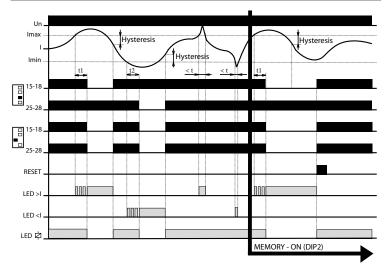

- If the value of the monitored current is in the zone between the set upper and lower levels, the OK state occurs, both output contacts are closed and the yellow LED illuminates. If the value of the monitored current is outside the set limits (> Imax or < Imin), a fault state occurs.
- When moving to a fault state (I > Imax), time delay t1 is running and red LED >I simultaneously flashes. After the time t1 elapses, the red LED >I illuminates and the relevant output contact opens.
- When moving to a fault state (I < Imin), time delay t2 is running and red LED <I simultaneously flashes. After the time t2 elapses, the red LED <I illuminates and the relevant output contact opens.
- When moving from a fault state to the OK state, the relevant red LED immediately goes out, and the corresponding output contact closes.
- DIP Switch "Output"
  - Output 1 = output contacts are switched in parallel
- Output 2 = output contacts are switched separately for each level

### Warning

This device is constructed for connection in 1-phase network AC/DC 24 - 240 V, AC 400 V and must be installed according to norms valid in the state of an application. Installation, connection, setting and servicing must be carried out by qualified electrician staff only, which have perfectly understood the instructions and functions of the device. This device contains protection against overvoltage peaks and disturbing impulses in the power supply network. For the correct function of the protection of this device, there must be suitable protections of higher degrees (A,B,C) installed in front of them and according to the standards, interference of switching devices must be securely eliminated (contactors, motors, inductive loads, etc.). Before installation, make sure that the device is de-energized and the main switch is in the "OFF" position. Don't install the device to sources of excessive electromagnetic interference. Ensure correct installation by perfect air circulation so that during continuous operation and a higher ambient temperature, the device does not exceed the maximum allowed operating temperature. For installation and setting use a screwdriver with a width of approx 2 mm. Keep in mind that this is a fully electronic device and approach accordingly with the installation. Non-problematic function of the device is also dependent on the previous method of transportation, storage, and handling. In case of any signs of damage, deformation, malfunction, or missing parts, don't install this device and claim it at the dealer. The product must be treated as electronic waste at the end of its life.

<sup>\*</sup> Only one input can be monitored at a time.